Lumiglas

Lumistar Luminaire ME, Stainless Steel

- Sturdy, attractive shape, protected by registered design
- For use with screwed sight glass fittings

Ideal for combined sight and light glass ports, suitable for circular screwed sight glass fittings to DIN 11851 or similar, sizes DN 65 to DN 125

• Application:

Designed for illuminating inside visual flow indicators, pipelines, laboratory mixers, as well as the interiors of vessels, tanks, agitators, stirrers and other normally closed containers in non explosive operating areas. Suitable for use in food processing industries.

• Protection:

When correctly fitted, dust and splash water protected, IP65 to EN 60 529/DIN VDE 0470 part 1

• Operating conditions:

Independent of internal vessel pressure/vacuum; max. permissible ambient temperature measured at cable entry gland, 80°C. When ambient temperature > 40°C heat resistant cable e.g. Sinotherm 110 H05GG-F 3G 1.5 mm² must be used. For LED version the max. permissible ambient temperature is 40°C.

• Electrical data:

Operating voltage: 24 V (12 V available as alternative) Lamp: 2-pin halogen lamp, depending on type 20 W, 50 W or 2 W LED

- Lamp holder: 2-pin socket
- Transformer: Available as a special accessory
- Integral switch:

An integrated push button switch is standard on all luminaires

• Please note:

The luminaire should not be connected to the power supply until the mechanical installation is complete

• Electrical connection:


The Lumistar luminaire ME, stainless steel is factory-fitted with a 3-metre cable tail which is temperature-resistant up to 90°C (Lapptherm 105). All internal wiring is complete and ready for use.

• Installing a different/new cable:


- Select a connecting cable that is suitable for the operating conditions
- The cable diameter should be the same as the cable gland
- Remove the reflector
- Insulate the cable ends
- Insert the cable through the cable gland into the lamp chamber and wire to the terminals or push-on blades (leading the protective earth along the housing wall)
- Tighten the cable gland
- Re-install the reflector
- It is easier to carry out the connection process if the filament lamp is removed first. The user then has more space, and damage to the lamp is avoided

• Mechanical installation:

- Please pay attention to the slotted nut opening, see table
- Loosen the slotted cover nut of the screwed sight glass fitting
 Lead the slotted cover nut over the connecting cable and lamp housing

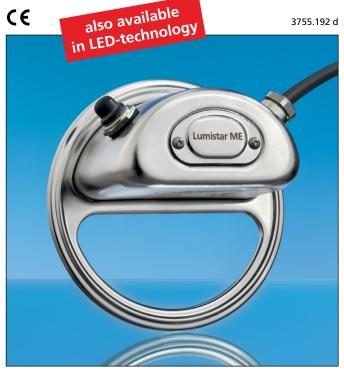

Lumistar luminaire ME, stainless steel

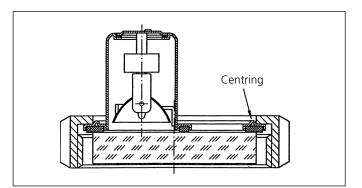


- Ensure that the sight glass is correctly positioned in the fitting
- Focus the luminaire, making sure to align the centring feature on the slotted cover nut (see drawing)
- Screw the slotted cover nut tight against the welding adapter with the luminaire fitted
- Changing the lamp:
- Caution! Before opening the luminaire, check that it is not too hot!
- Disconnect the luminaire from the power supply
- Tip: By loosening the cable gland slightly it is easier to work on the luminaire as the internal wiring has more space
- Open the cover and pull it out together with the installed lamp holder and the defective filament lamp
- Remove the defective filament lamp
- Using a protective cloth to hold the new filament lamp, insert it carefully into the 2-pin socket and push it into place
- Replace the cover with lamp holder and new filament lamp, check that the cables are in the correct position before screwing on the cover
- Tighten the cable gland whenever the lamp has been replaced. Reconnect the power supply



Lumiglas

• Dimensions and connection data for Lumistar luminaire ME, stainless steel

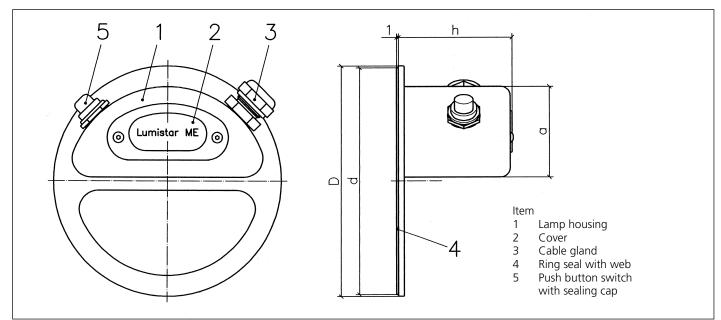

• Components, materials and assembly:

- Luminaire made of 1.4301 stainless steel
- Optimally suited for the pharmaceutical, food processing industries, etc.
- Lamp cover (2) is fitted with resilient flat seal and screws into the luminaire housing (1) (terminal box)
- Push button switch (5) with separate sealing cap is a standard feature for short-term operation
- Electrical cable connection through cable gland (3) to internal terminals 2.5 mm²
- Supply cable: 3 m cable tail is works-fitted and internally wired ready for use, Lapptherm 105 up to 90°C

Size		1	2	3	4
Lumistar luminaire	Туре	ME 65	ME 80	ME 100*	ME 125*
Compatible with screwed sight glass fittings to DIN 11851 or similar	DN	65	80	100	125
Operating voltage	V	24	24	24	24
Wattage	w	20	20	50	50
Dimensions	D	89	102	122	152
	d	86	99	119	149
	а	35	35	48	48
	h	45	45	60	60
Slotted nut opening to DIN 11851		80	94	115	138
Weight approx. (with connecting cable, without packaging)	kg	0.320	0.340	0.440	0.460
Part no.		3544.121.00	3544.122.00	3544.123.00	3544.124.00

* available in LED technology

• Combination: The Lumistar luminaire ME, stainless steel 125 can be combined with the Lumiglas sight glass wiper SW I

• Ordering data: e.g. Lumistar luminaire ME, stainless steel 100 / 24 V-50 W, part no. 3544.123.00

• Important, please note when ordering!

If the Lumistar luminaire ME, stainless steel is to be mounted on an already installed screw-type sight glass fitting, a specially adapted slotted cover nut should be ordered at the same time, or any existing one must be mechanically adapted. If necessary, please consult your Lumiglas sales contact. (See also hole diameter 'd 8' acc. to DIN 11851.)

All dimensions in mm unless stated otherwise. Subject to change without prior notice. 03.17

